

CHORD		CHARACTER	CHORD		CHARACTER
0SN	MMMM	MOUSE_OFF	0	MMM0	/
0SN	LLLL	MOUSE_ON	N	0L00	0
0SN	00L0	BKSP	N	R000	1
0	MM0M	TAB	N	0R00	2
S	MM0M	BTAB	N	00R0	3
0SN	000L	ENTER	N	000R	4
0SNF	RRR0	ESC	N	M000	5
	R000	LEFT	N	0M00	6
	M000	LEFT+INV_EXIT	N	00M0	7
	L000	RIGHT	N	000M	8
M	0R00	DBL+LEFT	N	L000	9
M	0M00	DBL+MIDDLE	0	00RL	:
M	0L00	DBL+RIGHT	0	R00R	;
M	00R0	CTRL+LEFT	N	M00L	<
M	00M0	SHIFT+LEFT	0	00MR	=
M	00L0	ALT+LEFT	N	R0R0	>
M	000R	TOGGLE+LEFT	0	RL00	?
M	000M	TOGGLE+RIGHT	0	00LR	@
M	000L	SHIFT+DBL+LEFT	0	R000	a
0S	L000	SPACE	0	0R00	b
0	R0L0	!	0	00R0	c
0	R0M0	"	0	000R	d
0	0M0L	#	0	M000	e
0	0LRO	\$	0	0M00	f
0	00RM	%	0	00M0	g
0	0L0L	&	0	000M	h
0	RM00	'	0	LR00	i
0	0LL0	(0	L0R0	j
0	0RL0)	0	L00R	k
0	00LM	*	0	LM00	l
0	00ML	+	0	L0M0	m
0	R0R0	,	0	L00M	n
0	R00L	-	0	LL00	o
0	RR00	.	0	L0L0	p
Thumb Key Table: 0 = No thumb key pressed S = SHIFT N = NUM F = Both NUM and ALT are pressed M = Mouse (including mouse mode)			When multiple thumb keys are indicated, it means that the symbol or function indicated is accessed by pressing any of the thumb keys.		

CHORD		CHARACTER	CHORD		CHARACTER
0	L00L	q	S	M0L0	Y
0	MR00	r	S	M00L	Z
0	M0R0	s	N	RM00	[
0	M00R	t	0	LLL0	\
0	MM00	U	N	R00M]
0	M0M0	V	N	LM00	^
0	M00M	W	0	0R0L	_
0	ML00	X	N	R0L0	`
0	M0L0	Y	N	R00L	{
0	M00L	Z	N	LLR0	
S	R000	A	N	LL0R	}
S	0R00	B	N	LLM0	~
S	00R0	C	0S	0L00	DEL
S	000R	D	F	LLR0	INS
S	M000	E	0	0RRR	HOME
S	0M00	F	0	0LLL	END
S	00M0	G	0	00RR	PGUP
S	000M	H	0	00LL	PGDN
S	LR00	I	0	0MR0	UPAR
S	L0R0	J	0	0ML0	DNAR
S	L00R	K	0	0M0M	RTAR
S	LM00	L	0	0MM0	LTAR
S	L0M0	M	S	0RRR	SHIFT+HOME
S	L00M	N	S	0LLL	SHIFT+END
S	LL00	O	S	00RR	SHIFT+PGUP
S	L0L0	P	S	00LL	SHIFT+PGDN
S	L00L	Q	S	0MR0	SHIFT+UPAR
S	MR00	R	S	0ML0	SHIFT+DNAR
S	M0R0	S	S	0M0M	SHIFT+RTAR
S	M00R	T	S	0MM0	SHIFT+LTAR
S	MM00	U	F	LLM0	PRINT
S	M0M0	V	F	LL0R	PAUSE
S	M00M	W	F	LL0M	BREAK
S	ML00	X	F	00LL	WIN
Thumb Key Table: 0 = No thumb key pressed S = SHIFT N = NUM F = Both NUM and ALT are pressed M = Mouse (including mouse mode)			When multiple thumb keys are indicated, it means that the symbol or function indicated is accessed by pressing any of the thumb keys.		

CHORD		CHARACTER	CHORD		CHARACTER
F	00LM	APP	F	0MR0	CTRL+F10
F	R000	F1	F	0M0R	CTRL+F11
F	0R00	F2	F	0MM0	CTRL+F12
F	00R0	F3	F	RR00	SHIFT+F1
F	000R	F4	F	R0R0	SHIFT+F2
F	M000	F5	F	R00R	SHIFT+F3
F	0M00	F6	F	RM00	SHIFT+F4
F	00M0	F7	F	R0M0	SHIFT+F5
F	000M	F8	F	R00M	SHIFT+F6
F	L000	F9	F	RL00	SHIFT+F7
F	0L00	F10	F	R0L0	SHIFT+F8
F	00L0	F11	F	R00L	SHIFT+F9
F	000L	F12	F	0RR0	SHIFT+F10
F	LR00	ALT+F1	F	0R0R	SHIFT+F11
F	L0R0	ALT+F2	F	0RM0	SHIFT+F12
F	L00R	ALT+F3	0S	LLLL	CAPS_LOCK
F	LM00	ALT+F4	0N	MMMM	NUM_LOCK
F	L0M0	ALT+F5	F	LL0L	SCROLL_LOCK
F	L00M	ALT+F6	0	0RR0	the
F	LL00	ALT+F7	0	0RM0	of
F	L0L0	ALT+F8	0	0R0R	to
F	L00L	ALT+F9	0	0M0R	ed
F	0LR0	ALT+F10	0	R00M	and
F	0L0R	ALT+F11	0	0R0M	in
F	0LM0	ALT+F12	0	0L0M	ion
F	MR00	CTRL+F1	0	00MM	ing
F	M0R0	CTRL+F2	0	0RR0	the
F	M00R	CTRL+F3			
F	MM00	CTRL+F4			
F	M0M0	CTRL+F5			
F	M00M	CTRL+F6			
F	ML00	CTRL+F7			
F	M0L0	CTRL+F8			
F	M00L	CTRL+F9			
Thumb Key Table: 0 = No thumb key pressed S = SHIFT N = NUM F = Both NUM and ALT are pressed M = Mouse (including mouse mode)			When multiple thumb keys are indicated, it means that the symbol or function indicated is accessed by pressing any of the thumb keys.		