 


# Quick Reference Guide for TouchStream ST/LP

## Mouse



**Point** - Touch & slide any two adjacent fingers



**Click** - Lightly tap any two adjacent fingers



**Double Click** - Tap three adjacent fingertips



**Right Click** - Tap thumb, middle, & ring fingers



**Drag/Select** - Touch & roll or slide three fingers




**Scroll** - Touch & slide/roll four fingers up/down




**Zoom In/Out** - Touch & expand/contract thumb & four fingers

## Text Cursor (left hand except for Tab/BkTab)

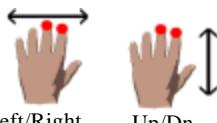


**Arrows** - Touch & slide two fingers


**Text Select** - Three fingers, touch & slide up/down or left/right

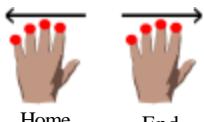

 **Home/End** - Four fingers, touch & slide left/right




 **PgUp/PgDn** - Four fingers, touch & slide up/down



**Tab/BkTab** - Thumb and finger touch & slide right/left -- be quick for single tab

## Internet Browsing - Use fingers shown.

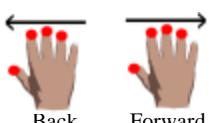


**Back/Forward** - Touch & slide left/right thumb & three fingers. Keep thumb away from fingers.




**Refresh/Replace** - Touch thumb & 3 fingers and slide down.


## File Operations - Use fingers shown.

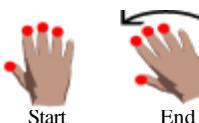


**Open** - Touch & rotate CCW thumb & three fingers

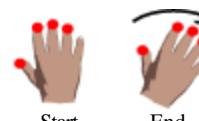

**Close** - Touch & rotate CW thumb & three fingers

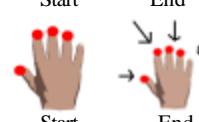


**Save** - Touch & contract thumb & three fingers

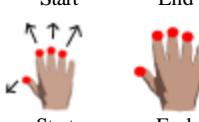

**New** - Touch & expand thumb & three fingers

## Editing

**Enter** - Spread then tap thumb & pinky finger

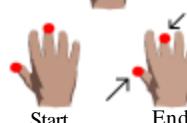

**Cut** - Touch & pinch thumb & middle finger



**Copy** - Tap thumb & middle finger



**Paste** - Touch & expand thumb & middle finger

**Undo/Redo** - Touch & slide up/down thumb & middle finger, quick for single step




**Find** - Touch & pinch thumb, middle, & ring finger




**Group or Search Again** - Touch & rotate thumb, middle & ring fingers

## Application Control


Spread thumb and fingers - start with fingers near edges.

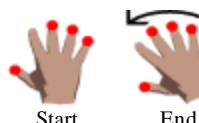

**Open Desktop** - Spread thumb & three outer fingers, touch & rotate CCW

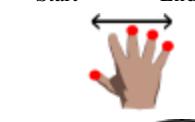

**Switch** - Spread thumb & three outer fingers, slide left/right, be quick for next/prev only

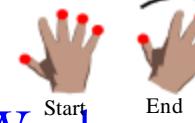

**Exit** - Spread thumb & three outer fingers, touch & rotate CW

## Additional Application Gesture Sets (Left Hand)

### Configuration Gesture




Touch all four corners simultaneously and hold for 1 second. Use this Gesture followed by the appropriate capitalized letter to enable the Gesture Sets below. In Mac mode, *Open Apple/Cmd* replaces *Ctrl*. In Unix/BeOS mode, *Alt* replaces *Ctrl*.

### Text Formatting (Config Gesture then <shift>F)




**Ctrl + T**

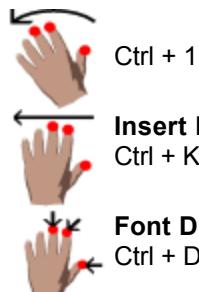

**Ctrl + 1**




**Align Left  
Ctrl + L**

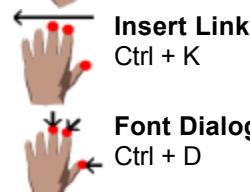

**Insert Link  
Ctrl + K**



 
**Justify  
Ctrl + J**




**Bold  
Ctrl + B**




**Select All  
Ctrl + A**

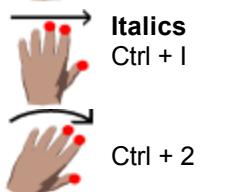


**Italics  
Ctrl + I**

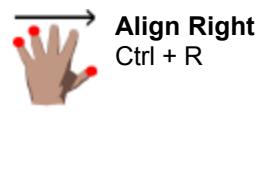

**Align Right  
Ctrl + R**

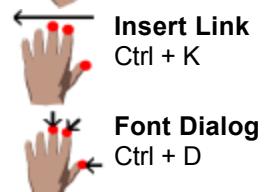


**Font Dialog  
Ctrl + D**

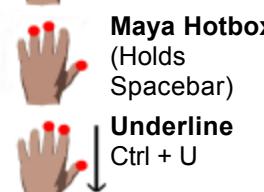

**Underline  
Ctrl + U**



 **Center  
Ctrl + E**




**Ctrl + M**

### PhotoShop Gestures (Config Gesture then <shift> Z)



**Ctrl + W**

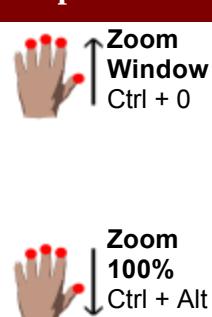

**Zoom Window  
Ctrl + 0**




**Send Back  
Ctrl + [**




**De-Magnify  
Alt + Space + Click**




**Zoom 100%  
Ctrl + Alt + 0**

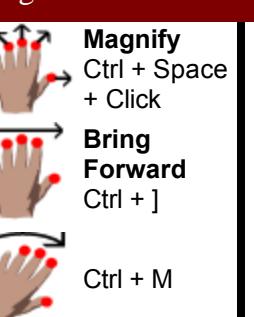


**Magnify  
Ctrl + Space + Click**

 


**Bring Forward  
Ctrl + ]**

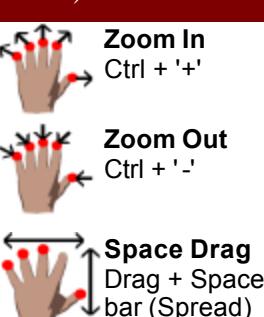

**Zoom In  
Ctrl + '+'**

 

**Zoom Out  
Ctrl + '-'**

 


**Space Drag  
Drag + Space bar (Spread)**

### Maya Gestures (Config Gesture then <shift> Y)



 **Maya Pan  
Alt + Middle Drag**



**Maya Orbit  
Alt + Left Drag**



**Maya Zoom/Rotate**

### Desktop/Tool Selection Gestures (Config Gesture then <shift> D)



**Meta + F10**



**Meta + =**



 
**Meta + F11**




**Ctrl + M**



**Prev Desktop  
Shift+Ctrl+Tab**



**Meta + F7**

 

**Meta + F8**



**Meta + F9**



**Next Desktop  
Ctrl + Tab**



**Ctrl + W**



**Meta + F4**



**Meta + F5**



 
**Meta + F6**



**Meta + F1**



**Meta + F2**




**Meta + F3**



**Meta + - (minus)**

### Third Mouse Button Gestures

**Middle Click/Drag** – Enabled in Linux\Unix Mode and 3-Button Mode-- Keep thumb 2 inches from fingertips.

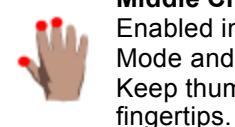

**Right Click/Drag** – Must spread hand to right click in Linux/Unix or 3-Button Mode.




**Pengrip for Middle Click/Drag** – Thumb + Index Fingertip + Middle/Ring/Pinky knuckles curled under. Always Enabled. Use with symbolic/handwriting gesture programs like Sensiva.




## TouchStream Programmers' Gestures, Emacs Mode & Modifier Chords (v 1.18)


### Programmers' Tools & Emacs Mode (Config Gesture then <shift> P or 7)

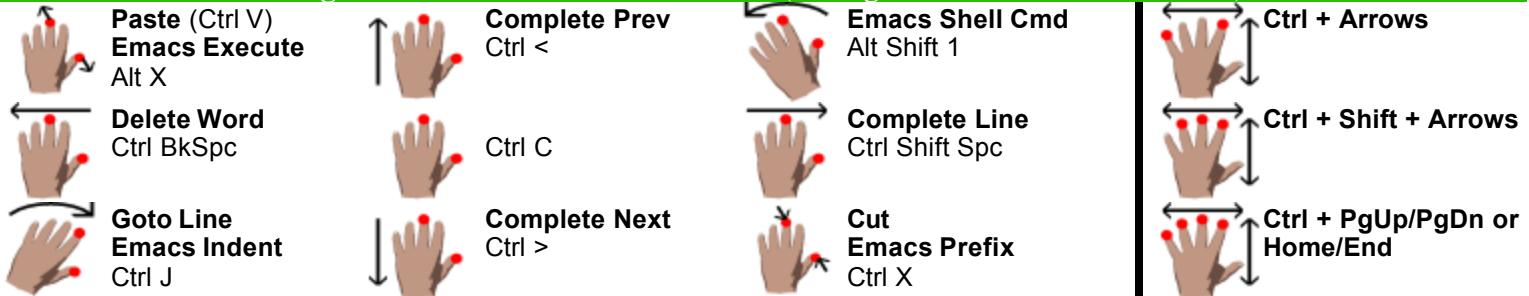

### Emacs Mode (Config Gesture then 7, also install touchstream.el script)

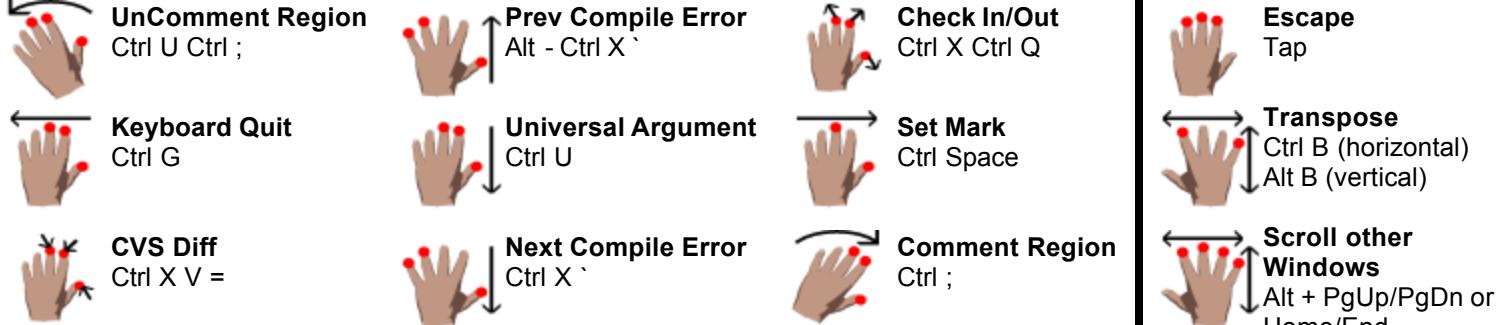

### Basic Modifier Chords (Config Gesture then c)

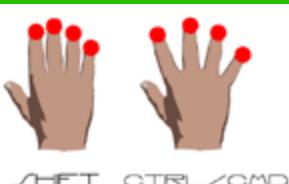

#### Modifier Chords Shift, Ctrl/Cmd

Modifier chords use the same timing as regular modifier keys. Hold down all 4 fingertips (without thumb!), type keys/gestures to be modified with opposite hand, and lift all when done.

### Enhanced Modifier Chords (Config Gesture then <shift>C for US-style, <ctrl>C for International)

Zone chords use four fingertips *above*, *below*, or *on* the Home Row keys of either hand. NOTE: *With Zone Chords, Shift can no longer be activated by dropping anywhere.*



The two chords below are performed by dropping the thumb + 3 fingertips simultaneously, with the hand either relaxed or spread, anywhere on the surface.



AltGr (US)  
Ctrl (International)  
Cmd (International Mac)



Win (US Windows)  
Meta (US Linux/Emacs)  
Ctrl (US Mac)  
LeftAlt (International)



Enter/Esc-Tap 3F of both hands:  
Above home for Escape,  
On home row for Enter.



CapsWord-Tap 4F of both hands *above* home row. Turns CapsLock *on* while next word is typed, *off* when Space or punctuation typed.

### Programmers' Pad (Config Gesture then <shift> U)

To use the Programmers' Pad, press the right-half key with the desired lower-right corner punctuation symbol while holding the **AltGr chord** with your left hand (so Enhanced Modifier Chords above must be enabled). When the Programmers' Pad is enabled, the **AltGr chord** will not activate accent symbols for European key layouts.



# Game Mode Gesture Guide (ver 1.18)

## Configuring for Game Mode



- The *config gesture* lets you customize your unit by holding fingers in all four corners for 1 second. (Always do this in a text window to see resulting messages).
- Before using game mode the first time, you must , then press *<Shift>G* or *Pause*.
- Pinky key/button actions can be toggled off/on by , then touching *Period (.)* key.
- PageDown inverted action can be toggled off/on by , then *Comma (,)* key.
- Both thumb and index triggers are always available--just use one base pointing chord or the other

## Activating and Deactivating Game Mode



 
To activate game mode on a surface, press your palm heels on the center of the surface and slide them forward. On the ST, each surface enables individually, so repeat this separately with each hand. The normal gesture set will be disabled and replaced with the game gestures shown below. Keys will be more responsive than normal but will not activate if more than one finger touches a surface half. *To restore normal operation, you must remember to reverse these gestures, pulling both palm heels toward you!*



### Thumb Trigger



Pointing Only



Pointing + Mouse1  
(left mouse button)



Pointing + Mouse2  
(right mouse button)




Pointing + Mouse1 + Mouse2

### Index Trigger



 Pointing Only



Pointing + Mouse1  
(left mouse button)



Pointing + Mouse2  
(right mouse button)



Pointing + Mouse1 + Mouse2

## Arrow Navigation (left half of ST/LP)

Holds arrow keys in response to sliding in particular directions, somewhat like a joystick, while pressing additional keys.

### Thumb Trigger



Arrows



Arrows + End



Arrows + Home



Arrows + End + Home

### Index Trigger



Arrows



Arrows + End



Arrows + Home



Arrows + End + Home

### Thumb Trigger (When PgDn Enabled)

Arrows + PageDn Arrows + PageDn + End Arrows + PageDn + Home Arrows+ PageDn + End + Home

## Additional Key Click and Button Click Gestures



NW



N



NE



 
X



W




Spacebar



E



 SW



S



SE



Z



Wheel Up



Mouse3



Mouse4



Wheel Down